



Scan for
Instructional video



QUICK START GUIDE

Start Here

• Features



- Auto-start function heats your water to your chosen temperature at your selected time
- Displays temperature in Fahrenheit or Celsius
- Displays actual water temperature in kettle even when powered off
- Includes preset temperatures for popular hot beverages
- Retains last temperature settings when powered off or unplugged
- Allows user to set and hold water temperature for up to one hour
- Durable 300 Series food grade stainless steel
- Count-up timer feature
- Detachable power cord (in markets outside of North America)

• What's in the box?



1.2 Liter Gooseneck Spout Digital Kettle

Removable Power Cord
(In markets outside of North America)




Cafetto™ Descaler



Base

• Layout

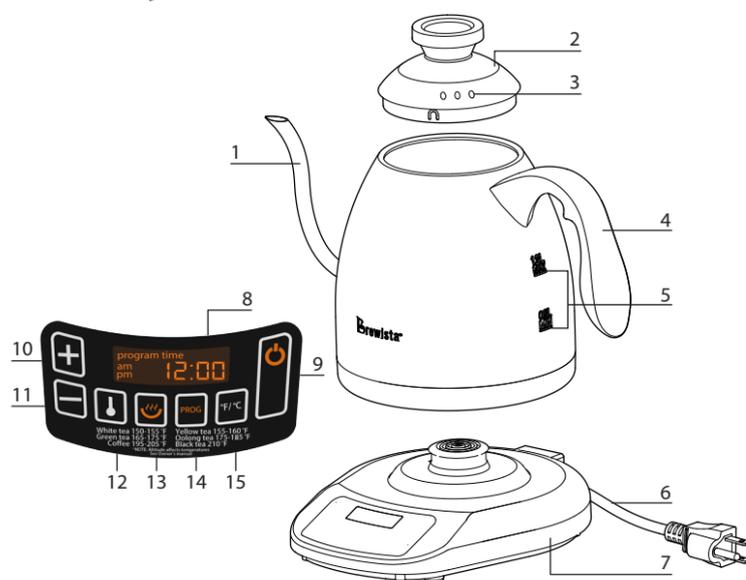

- | | |
|--|-----------------------------------|
| 1) Spout | 7) Base |
| 2) Lid | 8) LCD Readout |
| 3) Vent Holes | 9) ON/OFF button |
| 4) Handle | 10) [+] button |
| 5) Min & Max water level indicator | 11) [-] button |
| 6) Power cord with plug (Removable power cord in markets outside of North America) | 12) TEMPERATURE SETTING button |
| | 13) KEEP WARM button |
| | 14) PROG / Program setting button |
| | 15) Display degree °F / °C button |

• Setting Up the Kettle



- Set the base on a flat, steady surface and plug cord into a grounded wall outlet. (If your kettle has a removable power cord, attach the female end of the power cord to the base first.)
- Lift off the lid and fill kettle with cold water.

IMPORTANT! Do not fill above the "max" fill line (1.2L).

- Return kettle to the base.

• First Time Use



- Fill the kettle to the Max fill line (1.2 L) (marked inside of kettle) with cold water.
- Replace the lid with holes facing away from the handle.
- Press the ON/OFF button to start boiling automatically.
- Bring water to a boil, then empty the kettle.
- Allow the appliance to cool down for 1 minute.
- Repeat twice before initial use.

• Setting the Temperature

(Refer to owner's manual for detailed temperature setting instructions.)



- Press the °F / °C button to choose either Fahrenheit or Celsius.
- Press the TEMPERATURE SETTING button to choose a preset temperature.
- Press the [+] button to increase the temperature by one degree.
- Press the [-] button to decrease the temperature by one degree.
- The temperature displayed on the screen will be stored after three (3) seconds.
- Once the temperature is set, it will be stored in memory and will be recalled the next time the kettle is turned on.
- During the heating cycle, the LCD will display the current water temperature.



- To stop the heating process, press the ON/OFF button or remove the kettle from the base.
- To resume heating, return kettle to base and press the "ON/OFF" button.
- When the set temperature is reached, three audible beeps are emitted.

WARNING: Never set the temperature above the boiling point. Refer to the "High Altitude Users" section in the owner's manual to determine the boiling temperature for your altitude.

• Setting the Current Time

(Refer to owner's manual for detailed time setting instructions.)



- Plug the power cord into the wall outlet. The display will flash "time am 12:00".
- Press the [+] button to change the hour.
- Press the [-] button to change the minutes.

Note: If time stops flashing before current time is set, press and hold the [+] button to activate the time change function.


• Keep Warm Function



- Press the KEEP WARM button.
- The set temperature will be maintained for one hour.
- If the kettle is removed from the base, the Keep Warm feature will deactivate.
- To resume the Keep Warm feature, return kettle to base and press the KEEP WARM button.
- If the Keep Warm feature is not active, the kettle will reach the set temperature and shut off.


• Auto-Start Function

(Refer to owner's manual for detailed Auto-start setting instructions.)

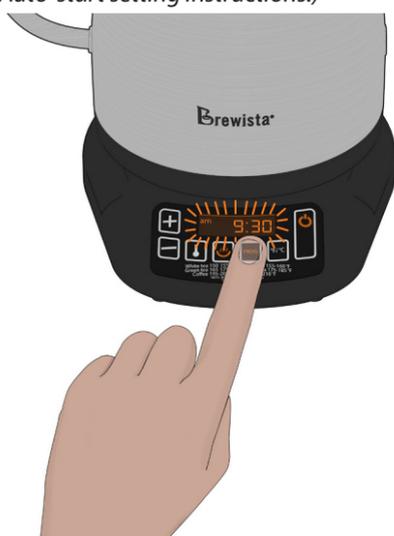

Note: The Auto-start time is the time at which the heating cycle will be complete.

- Press the PROG button once.
- The current time will flash five times.
- If it is necessary to adjust the current time;
 - Press the [+] button to increase the hour and the [-] button to increase the minute of the current time.
- After a few seconds of inactivity, the current time will be stored, and the LCD will flash the Auto-start time.

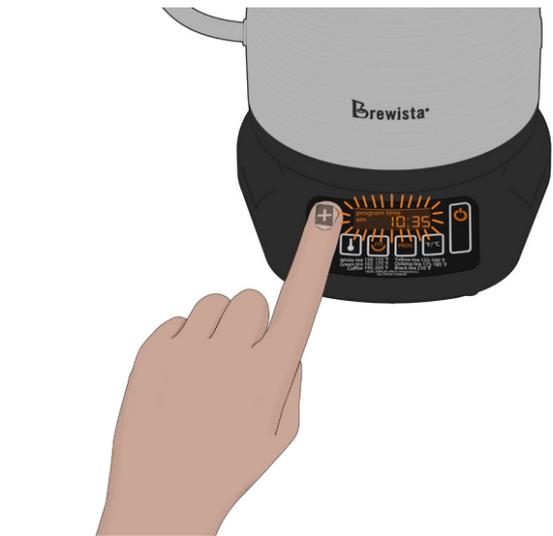


- While the Auto-start time is flashing;
 - Press the [+] button to increase the hour and the [-] button to increase the minute of the Auto-start time.
- After a few seconds of inactivity, the Auto-start time will be stored, and the LCD will flash the programmed temperature setting.
 - Press [+] and [-] buttons to set desired temperature.
 - The temperature will be stored after a few seconds of inactivity.
- If the Auto-start time and current time are less than 8 minutes apart, heating begins immediately.

• Count-Up Timer Feature



- Remove the kettle from the base.
- The LCD will display "0:00".
- Press the [+] button to start the count-up timer.
- The maximum count-up time is 7 minutes.
- Return the kettle to the base then lift it off again to reset the timer to zero.

• Washing Instructions

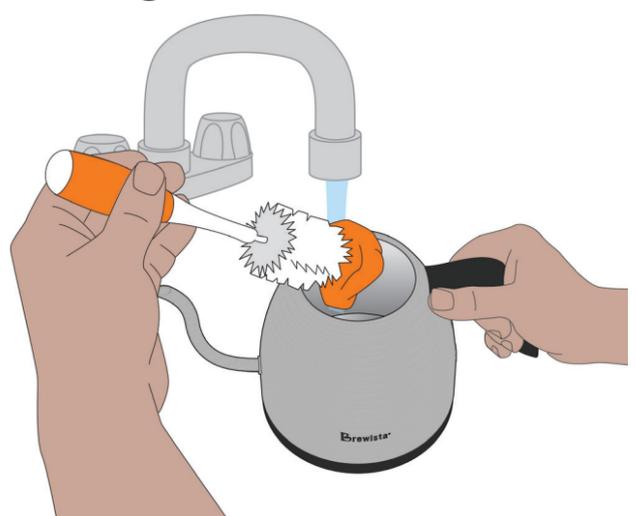

- Remove the kettle from the base.
- Clean the outside of the base and the kettle with a damp, soft cloth or sponge. A bottle brush may be used to clean the interior of the kettle.
- Clean the inside of the kettle with dish detergent and rinse thoroughly with water.
- Do not use abrasive cleaners.
- After cleaning, dry the kettle and the base thoroughly.

WARNING: Never immerse the kettle or the base in water or other liquids.

• Descaling

- When mineral scale builds up in the kettle, it can affect temperature consistency and slow down heating time.
- To ensure optimum performance, Brewista recommends descaling the kettle when mineral build-up is visible inside the kettle.


Note: Vinegar may not effectively descale the kettle and can be difficult to thoroughly rinse. Vinegar may also leave behind an odor that could affect future use.

Brewista recommends using Cafetto™ Descaler.



How to use Cafetto™ Descaler:

- Mix 1 packet Cafetto™ Descaler with 40 oz. of lukewarm water.
- Pour the solution into the kettle.
- Bring the solution to a boil.
- Let the vessel cool for 15 minutes, then discard the solution.
- Rinse thoroughly with fresh water.

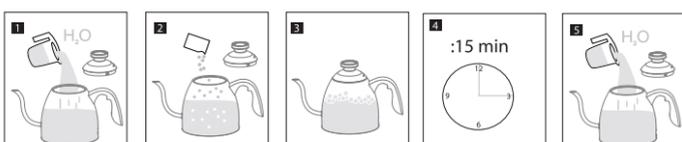

Brewista®

Smart Pour™ Variable Temperature Kettle

BKV12502 Series

1133 W. 27th Street, Cheyenne, WY 82001, USA | www.mybrewista.com

Toll Free in North America: 888-538-8683 | Local: 307-222-6086