

start here.
quick start guide



 
Brewista®
Artisan
Variable Temperature Kettle
BAVTK2 Series

• Features



- Auto-start function heats your water to your chosen temperature at your selected time
- Displays temperature in Fahrenheit or Celsius
- Displays actual water temperature in kettle
- Includes preset temperatures for popular hot beverages
- Retains last temperature settings when powered off or unplugged
- Allows user to set and hold water temperature for up to one hour
- Durable 300 series food grade stainless steel
- Count-up and count-down timer features
- Detachable power cord

• What's in the box?

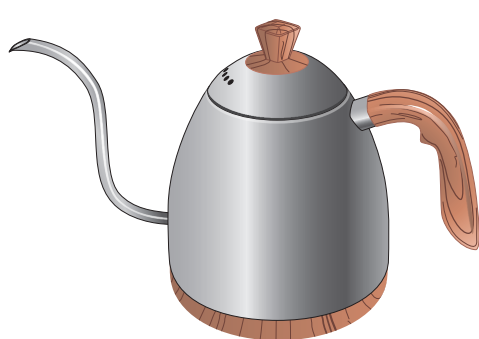


0.9 Liter Gooseneck Spout Digital Kettle

Removable Power Cord





Base with capacitive touch icons

 • Layout

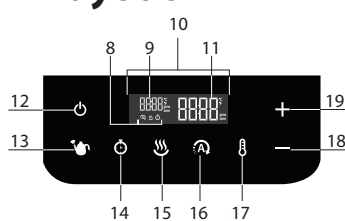

  - 1) Spout
- 2) Lid
- 3) Vent Holes
- 4) Handle
- 5) Max & Min water level indicators (inside kettle)
- 6) Kettle Body
- 7) Base
- 8) Mode icon display
- 9) Target Temperature
- 10) LCD Readout
- 11) Actual Temperature
- 12) Power icon
- 13) Smart Boil icon
- 14) Timer icon
- 15) Keep Warm icon
- 16) Auto Brew icon
- 17) Temperature Setting icon
- 18) [-] icon
- 19) [+] icon
- 20) Removable power cord with plug

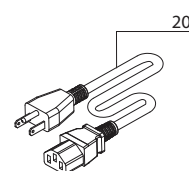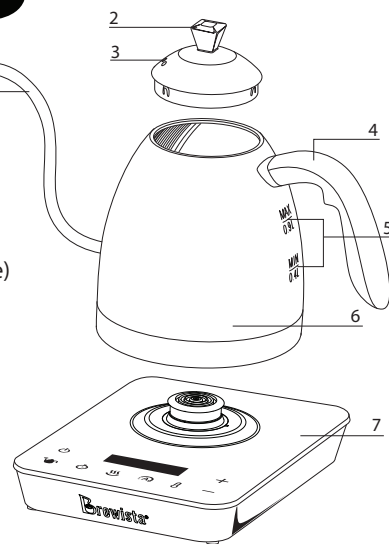


• Setting Up the Kettle



- Set the base on a flat, steady surface and attach the female end of the removable power cord to the base.
- Plug cord into a grounded wall outlet. Refer to the SAFEGUARDS sections at the beginning of your owner's manual for more details before plugging in your kettle.

 • First Time Use

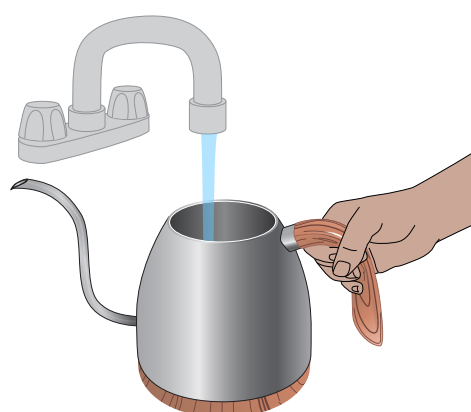

- Fill the kettle to the Max fill line (0.9 L) (marked inside of kettle) with cold water.

 
IMPORTANT! Do not fill above the "max" fill line (0.9 L).

- Replace the lid with vent holes facing away from the handle and place kettle back on its base.
- Press the Power icon to turn the kettle on and then press the Smart Boil button to start boiling automatically.
- Bring water to a boil, then empty the kettle.

WARNING: Setting the temperature above the boiling point is not recommended and may damage the kettle. Refer to the "High Altitude Users" section in the owner's manual to determine the boiling temperature for your altitude.

- Allow the appliance to cool down for 1 minute.
- Repeat twice before initial use.

• Normal Use

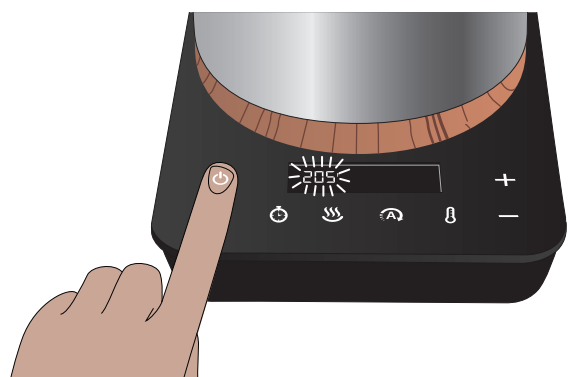

- Fill the kettle to desired level above the "Min" fill line and below the "Max" fill line with water.
- Replace the lid with vent holes facing away from the handle and place the kettle back on its base.
- Press the Power icon once to turn on the kettle and a second time to set the Target Temperature. While the Target Temperature flashes for 3 seconds, press the [+] or [-] icons if needed to change the target temperature.
- The kettle will heat the water to the Target Temperature, displaying Actual Water Temperature on the right side of the LCD Readout.
- You will hear 3 beeps when the Target Temperature is reached.
- The kettle's Keep Warm function will automatically maintain the desired temperature for one hour.
- To stop the heating cycle, press the Power icon again or lift the kettle from its base.

• Keep Warm Function



 
- The Keep Warm function will begin automatically after a programmed heating cycle is completed. Does not apply if Smart Boil function is active.
- The set temperature will be maintained for one hour.
- If the kettle is removed from the base, the Keep Warm feature will deactivate.
- To resume the Keep Warm feature, return kettle to base and press the KEEP WARM button.

• Setting the Temperature

(Refer to owner's manual for detailed temperature setting instructions.)



- To change from Fahrenheit to Celsius, press and hold the Temperature Setting icon for 3 seconds. Once the base "beeps", press either the [+] or [-] icon to toggle between F° and C°
- Press the Temperature Setting icon to choose a preset temperature.
- Press the [+] icon to increase the temperature by one degree.
- Press the [-] icon to decrease the temperature by one degree.
- The temperature displayed on the screen will be stored after three (3) seconds.
- Once the temperature is set, it will be stored in memory and will be recalled the next time the kettle is turned on.

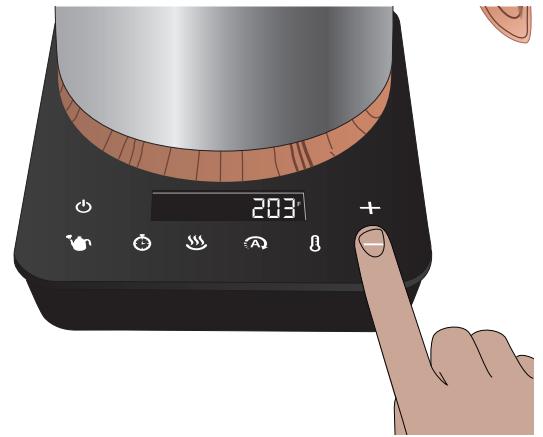


- During the heating cycle, the LCD will display the set target temperature on the upper left and the actual water temperature on the right.
- To stop the heating process, press the Power icon or remove the kettle from the base.
- To resume heating, return kettle to base and press the Power icon or Keep Warm icon.
- When the set temperature is reached, three audible beeps are heard.


• Auto Brew Function

(Refer to owner's manual for detailed Auto Brew instructions.)

 Note: The Auto Brew time is the time at which the heating cycle will be complete.

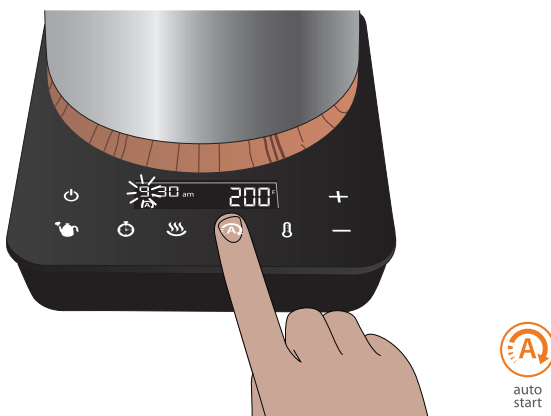

- Press and hold the Auto Brew icon for 3 seconds.
- Press the [+] icon, [-] icon, or Temperature Setting icon to set of select the desired Auto Brew temperature.
- Set the Auto Brew time:
 - Press the Auto Brew icon again. The Auto Brew time on the right side of the LCD Readout will have the hour digit(s) flashing.
 - Press the [+] or [-] icons to change the hour portion of the Auto Brew time.
 - Press the Auto Brew icon again and the minutes portion of the Auto Brew time will flash.
 - Press the [+] or [-] icons to change the minutes portion of the Auto Brew time.

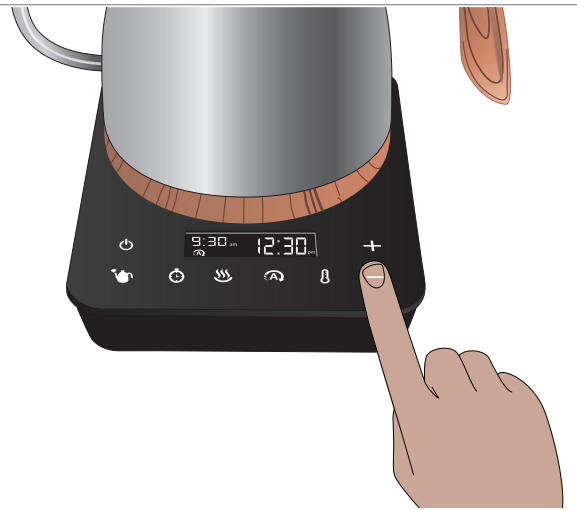 

- Set the Current Time:
 - After setting the Auto Brew Time (see above), press the Auto Brew icon. The hour of the current time will flash on the left side of the LCD readout.
 - Press the [+] or [-] icons to change the hour portion of the current time.
 - Press the Auto Brew icon again and the minutes portion of the current time will flash.
 - Press the [+] or [-] icons to change the minutes portion of the current time.
 - Once the Auto Brew Time and current time are correct, wait for 3 seconds for these times to be stored.
- To activate the Auto Brew function, press the Auto Brew icon one time. The Auto Brew icon will light up.

• Timer Feature



- Press the Timer icon to enter timer mode. The LCD will display "0:00".
- Press the Timer icon again to start the count-up timer.
- Press the Timer icon again to stop the timer. Press the Timer icon again to reset.
- To access the count-down timer, press and hold the Timer icon until the minutes digits flash. Refer to page 11 of your Owner's Manual for instructions on setting the count-down timer.
- To reset the timer to zero, press the Timer icon once more.

• Smart Boil Function



- Press the Smart Boil icon. The Smart Boil function brings the water to boiling temperature as quickly as possible.
- Once the kettle's water has reached boiling temperature (varies based on your altitude), you will hear 3 beeps and the Smart Boil function will stop.
- The Actual Temperature inside the kettle will be displayed for 10 minutes before the kettle enters Sleep Mode.
- To stop the Smart Boil function, press the Smart Boil icon or Power icon at anytime during the cycle.

• Washing Instructions



- Remove the kettle from the base.
- Clean the outside of the base and the kettle with a damp, soft cloth or sponge. A bottle brush may be used to clean the interior of the kettle.
- Clean the inside of the kettle with dish detergent and rinse thoroughly with water.
- Do not use abrasive cleaners.
- After cleaning, dry the kettle and the base thoroughly.

WARNING: Never immerse the kettle or the base in water or other liquids.

• Descaling

- When mineral scale builds up in the kettle, it can affect temperature consistency and slow down heating time.
- To ensure optimum performance, Brewista recommends descaling the kettle when mineral build-up is visible inside the kettle.

Note: Vinegar may not effectively descale the kettle and can be difficult to thoroughly rinse. Vinegar may also leave behind an odor that could affect future use.

Brewista recommends using Brewista® Descaler.



How to use Brewista® Descaler:

- 1) Mix 1 packet Brewista® Descaler with 40 oz. (1.2L) of lukewarm water.
- 2) Pour the solution into the kettle.
- 3) Bring the solution to a boil.
- 4) Let the vessel cool for 15 minutes, then discard the solution.
- 5) Rinse thoroughly with fresh water.

